
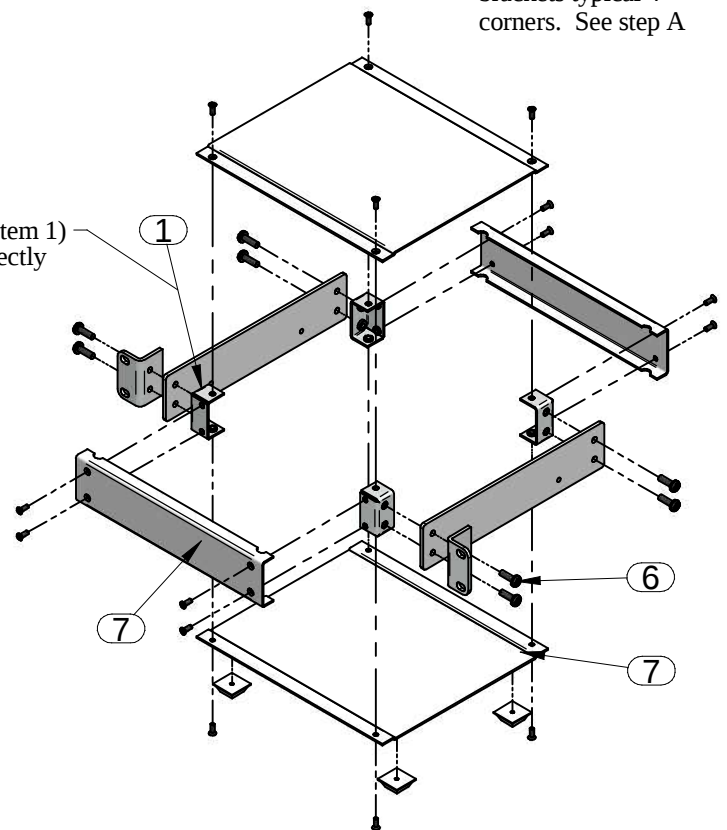


Note: For 1 unit high cabinet use internal corner brackets typical 4 corners. See step A

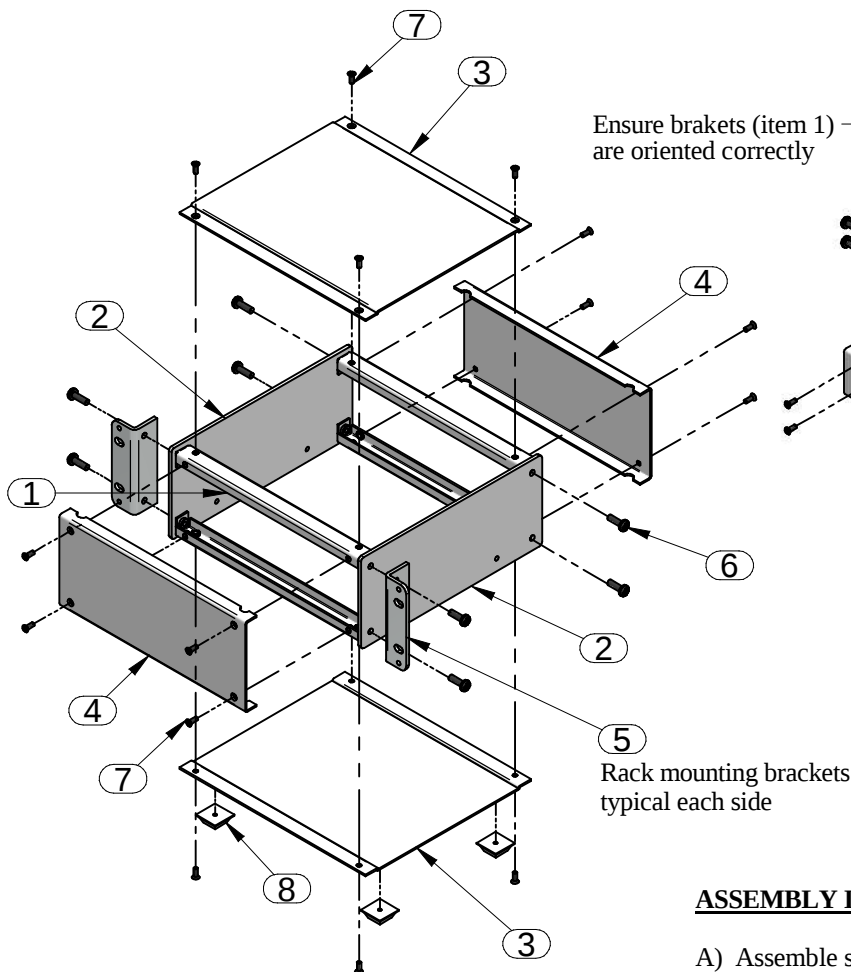

1 UNIT HIGH CABINET

ASSEMBLY INSTRUCTIONS:

A) Assemble sides (item 2) to the internal rails (item 1) or internal corner brackets (1 unit high) using 10-32 x 1/2 machine screws (item 6) as shown. Ensure holes on internal rails face out and extra holes on sides are at the bottom.

B) For rack mounting install rack mounting brackets (item 5) to sides. Optional handles can also be used with brackets (but may interfere with rack installation)

C) Fasten top and bottom panels (item 3) to the internal rails (item 1) using 6-32 x 3/8 screws (item 7) as shown.

D) Fasten front and rear panels (item 4) to the internal rails (item 1) using 6-32 x 3/8 screws (item 7) as shown.

E) Install rubber feet (item 8), (self adhesive), in desired location on bottom if required.

PARTS LIST		
ITEM No.	DESCRIPTION	QTY
1	INTERNAL RAILS OR CORNER BRACKETS	4
2	SIDES	2
3	TOP/BOTTOM PANELS	2
4	FRONT/REAR PANELS	2
5	RACKMOUNTING BRACKETS	2
6	10-32 MACHINE SCREWS	8
7	6-32 X 3/8 PH SCREWS	16
8	RUBBER FEET (SELF ADHESIVE)	4

TOOL BOX



#2 Phillips
Screw Driver



visit our website @ www.hammondmfg.com